


SBA

S-Beam Load Cell




Crane

● DIMENSION

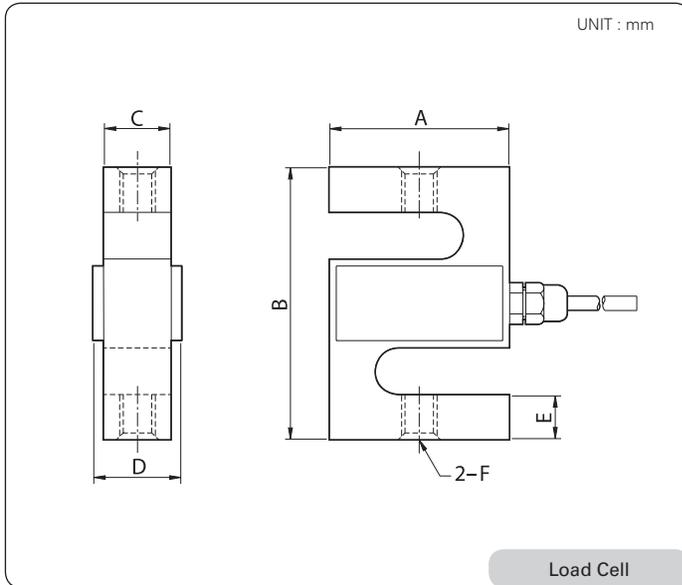

Capa.	A	B	C	D	E	F
25	50.8	63.5	12.7	20	10.3	M6 X 1.0
50						
100						
200	51	76	19	27	12.6	M12 X 1.75
500						
1K	51	76	25.4	33	12.6	M12 X 1.75
2K	77	108	25.4	33	19	M18 X 1.5
3K						
5K	77	108	25.4	33	19.5	M18 X 1.5

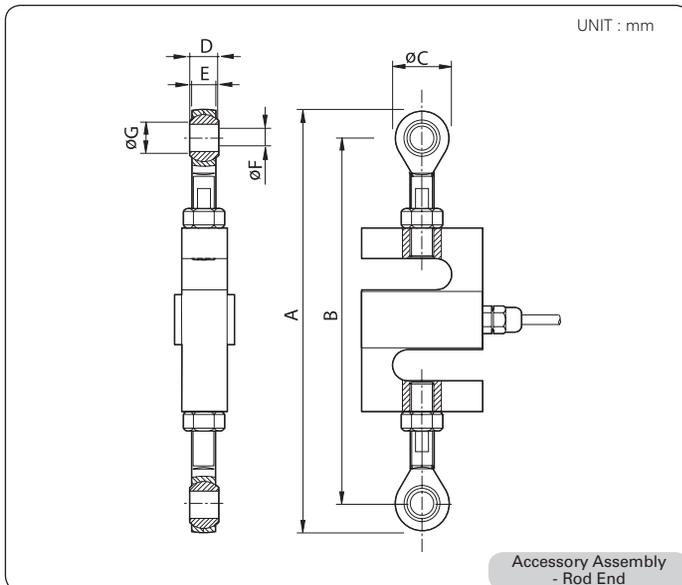

● ACCESSORY FEATURES

- Over Load under 150%
- Easy Rod End installation
- Bearing included structure

● MANUAL

- Install the Rod End on the upper and bottom side of the Load Cell
- Do not insert the Rod End until the end
- The Rod End should be in a perpendicular with the force direction of the Load Cell

Capa.	A	B	C	D	E	F	G
25	134.1 (Max)	115.6	18.5	9	6.8	9	12
50							
100							
200	211.1	177.1	34	16	12	12	15.4
500							
1K	318	258	60	23	22	18	21.9
2K	317	257	60	23	22	18	21.9
3K							
5K	317	257	60	23	22	18	21.9

SPECIAL APPLICATION TRUCK & TANK WEIGHING PANCAKE & MINIATURE CANISTER S-BEAM BENDING & SHEAR SINGLE POINT